

1/8

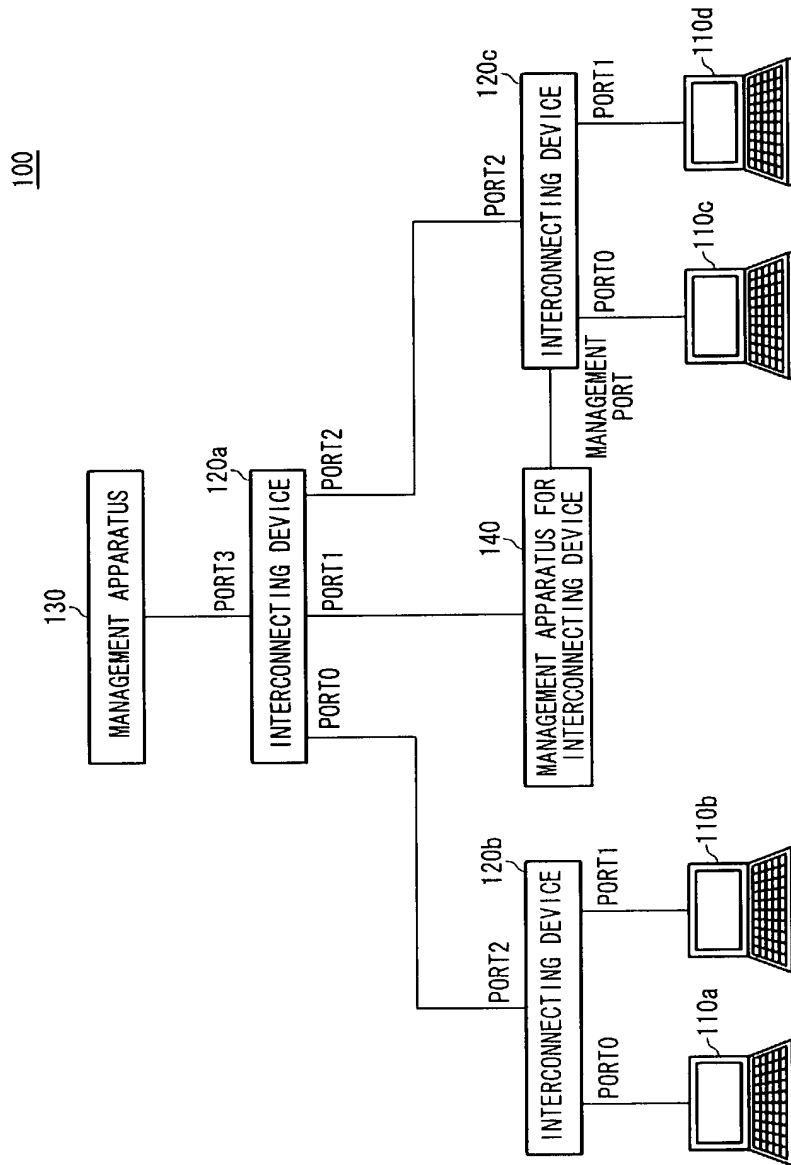


FIG. 1

AT-0026US

2/8

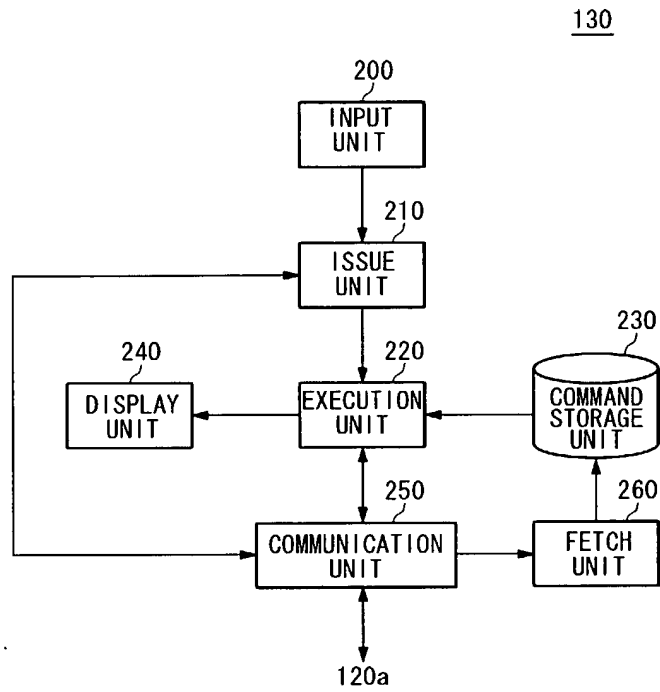


FIG. 2

AT-0026US

3/8

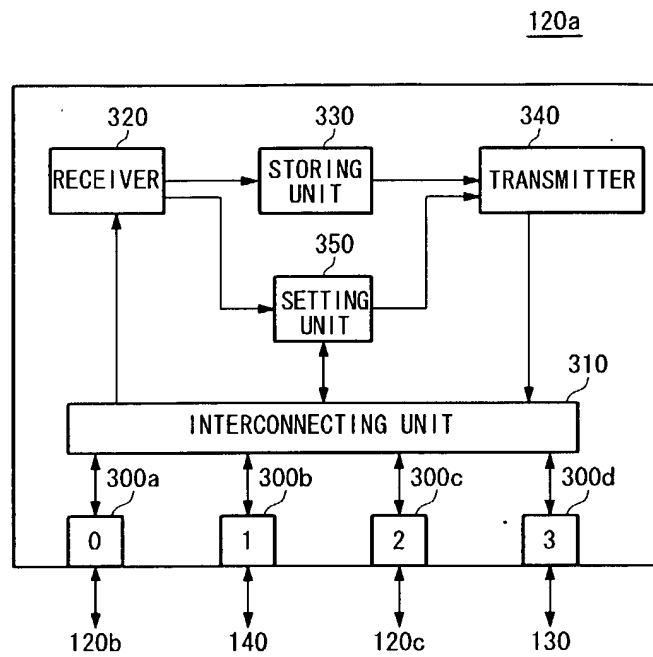


FIG. 3

AT-0026US

4/8

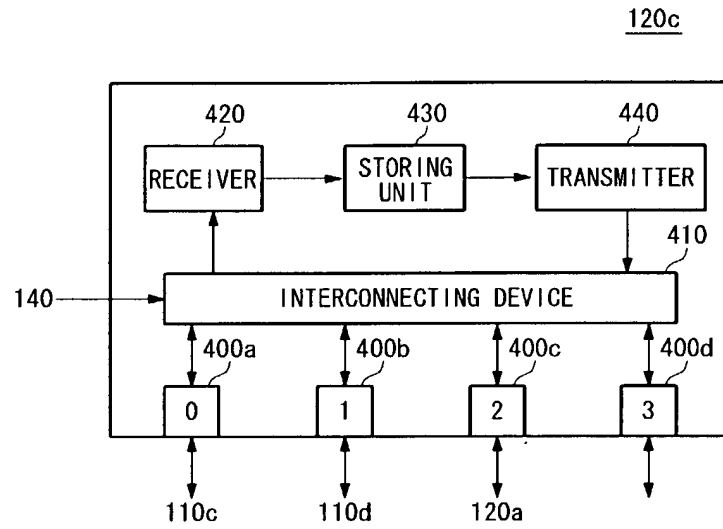


FIG. 4

AT-0026US

5/8

230

#	COMMAND	INTERCONNECTING DEVICE	EXECUTION PROCEDURE
1	CMD_VLAN_Create	INTERCONNECTING DEVICE 120a	_____
2	CMD_VLAN_Create	INTERCONNECTING DEVICE 120b	CMD_VLAN_Create_B
3	CMD_VLAN_Create	INTERCONNECTING DEVICE 120c	_____
4	CMD_VLAN_Delete	INTERCONNECTING DEVICE 120a	_____
5	CMD_VLAN_Delete	INTERCONNECTING DEVICE 120b	CMD_VLAN_Delete_B
6	CMD_VLAN_Delete	INTERCONNECTING DEVICE 120c	_____
7	CMD_VLAN_Set_Port	INTERCONNECTING DEVICE 120a	_____
8	CMD_VLAN_Set_Port	INTERCONNECTING DEVICE 120b	CMD_VLAN_Set_Port_B
9	CMD_VLAN_Set_Port	INTERCONNECTING DEVICE 120c	_____
10	CMD_VLAN_Reset_Port	INTERCONNECTING DEVICE 120a	_____
11	CMD_VLAN_Reset_Port	INTERCONNECTING DEVICE 120b	CMD_VLAN_Reset_Port_B
12	CMD_VLAN_Reset_Port	INTERCONNECTING DEVICE 120c	_____

FIG. 5

AT-0026US

6/8

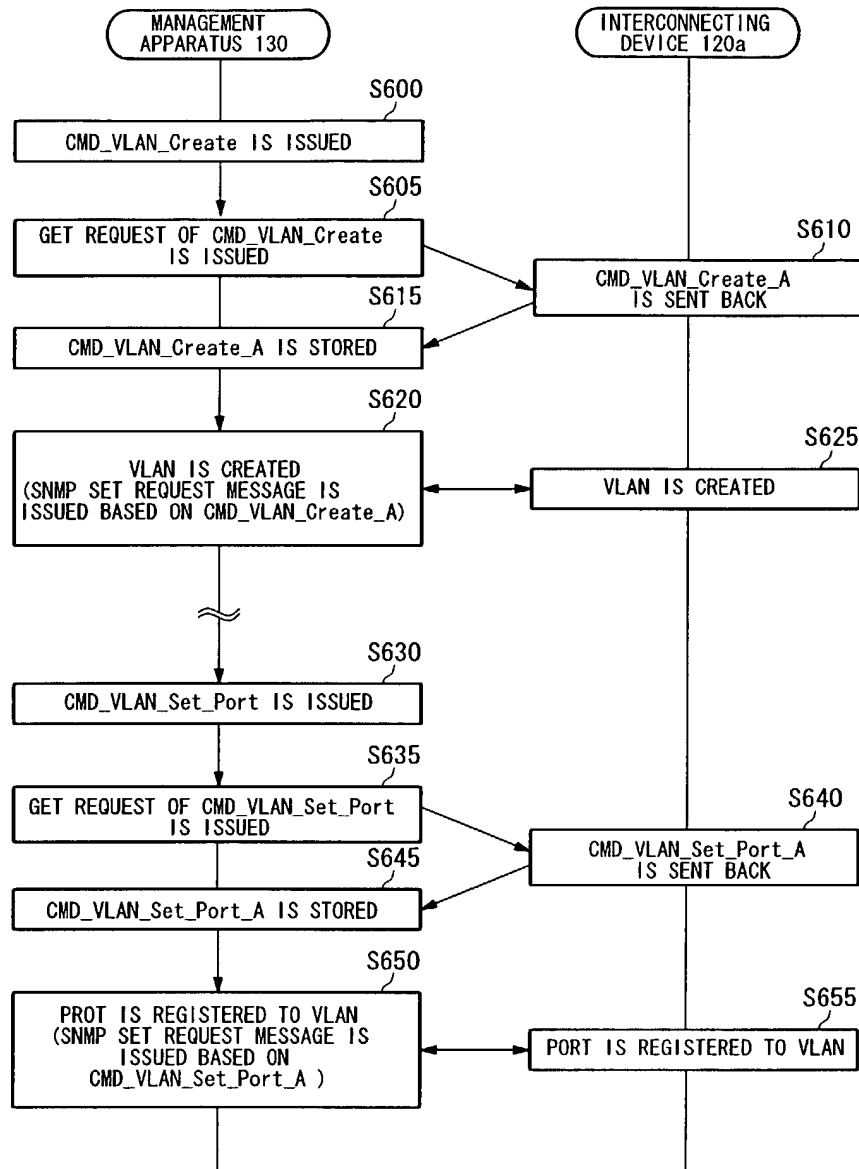


FIG. 6

AT-0026US

7/8

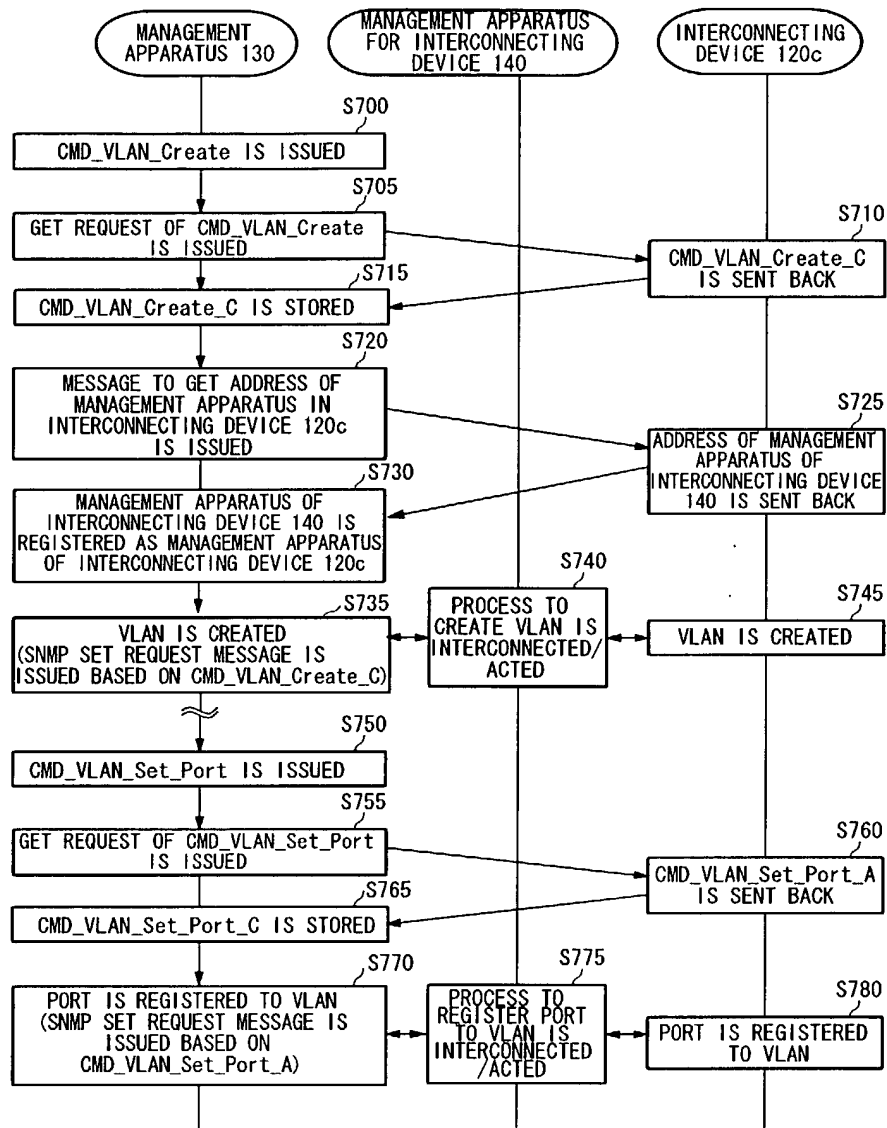


FIG. 7

AT-0026US

8/8

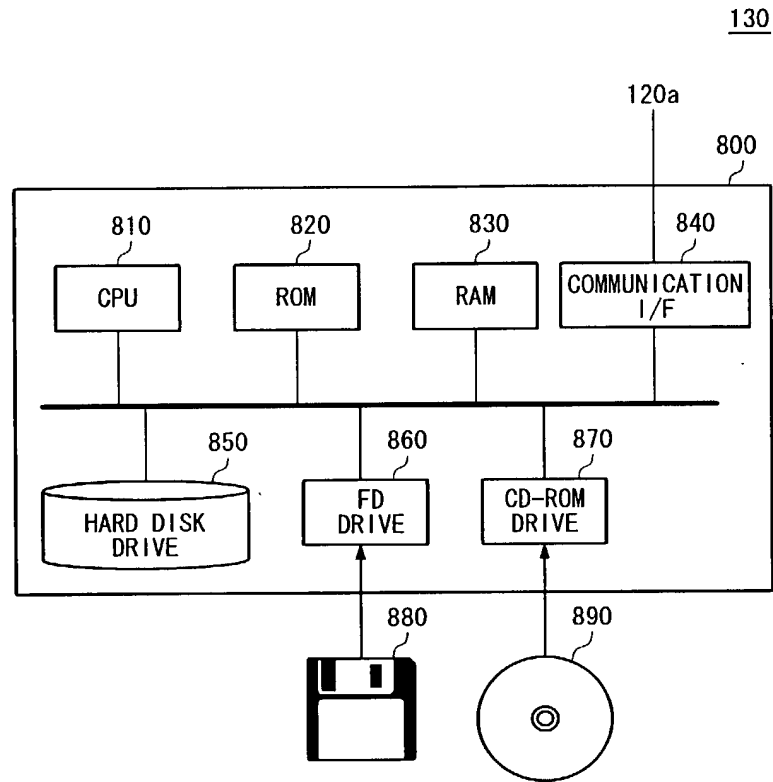


FIG. 8

AT-0026US